




## CH Tool & Die

711 N Sandusky St Mount Vernon OH 43050 USA


740-397-7214 www.chtoolanddie.com

# Cannelure Tool

**BOTTOM VIEW**

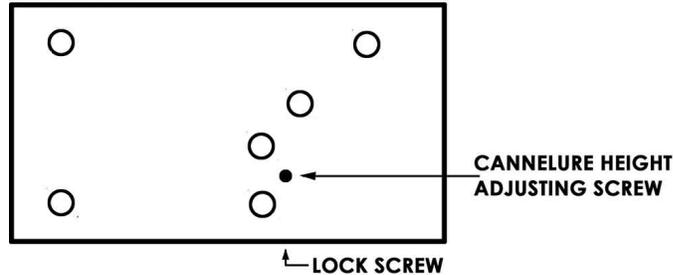

**TOP VIEW**

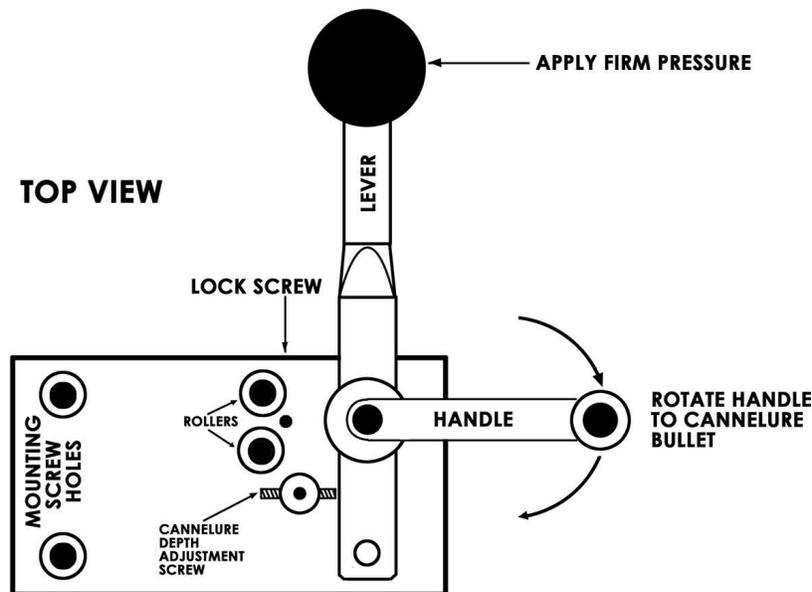

1. Base must be held firmly by attaching to bench or clamping in a vice.
2. Adjust canneldure height adjustment screw.
3. Place bullet on rollers.
4. Rotate lever and adjust the canneldure depth adjustment screw until the knurling tool barely contacts the bullet.
5. Readjust canneldure height adjustment screw until the knurling tool is positioned on the bullet at the desired location.
6. Rotate the handle while applying firm pressure. Adjust canneldure depth adjustment screw until the canneldure groove reaches the desired depth.